



Installation Guide

Canvas
(Hardwired)

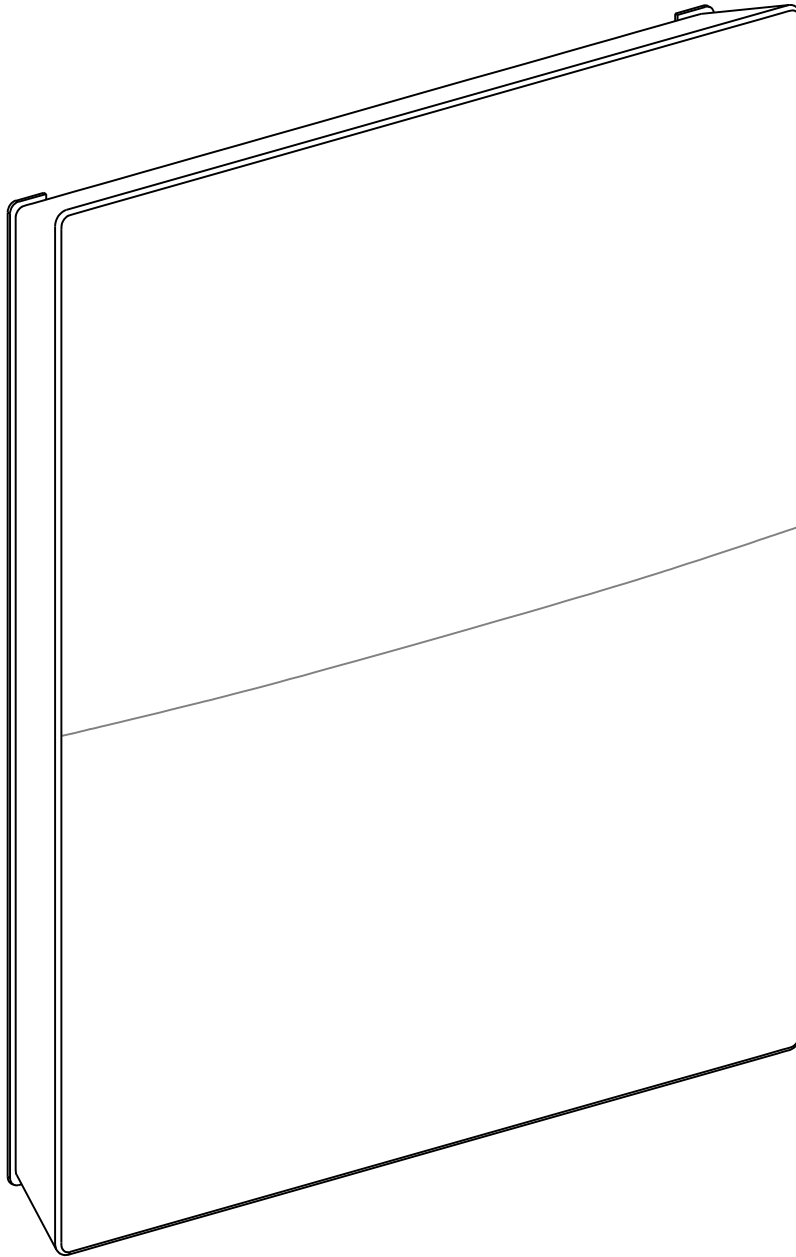


KĀDNS

Need help?
Please contact info@kadns.co

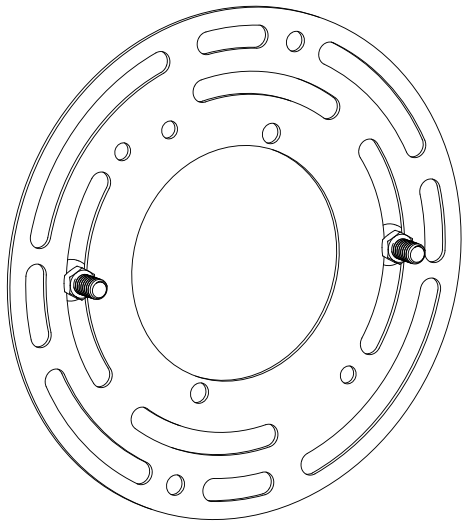

Mounting Plate
(Pre-assembled with
screws and nuts)




Screw
(2X)




Hex Nut
(2X)




Washer
(4X)




Wire Connector
(3X)

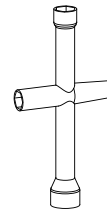

Cross Wrench

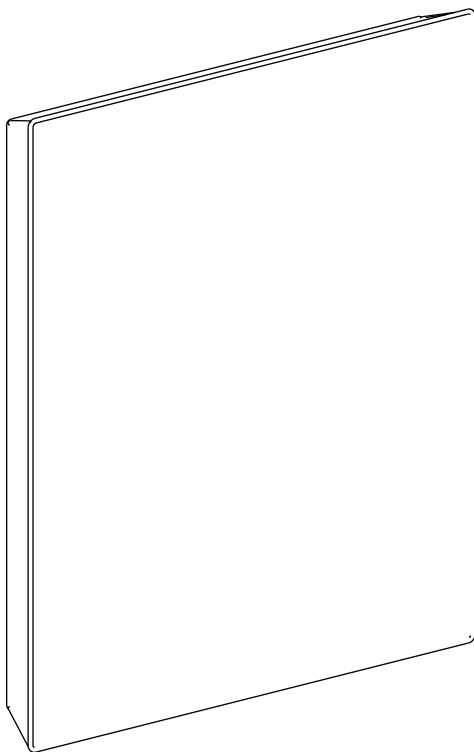

Cocoon Shade

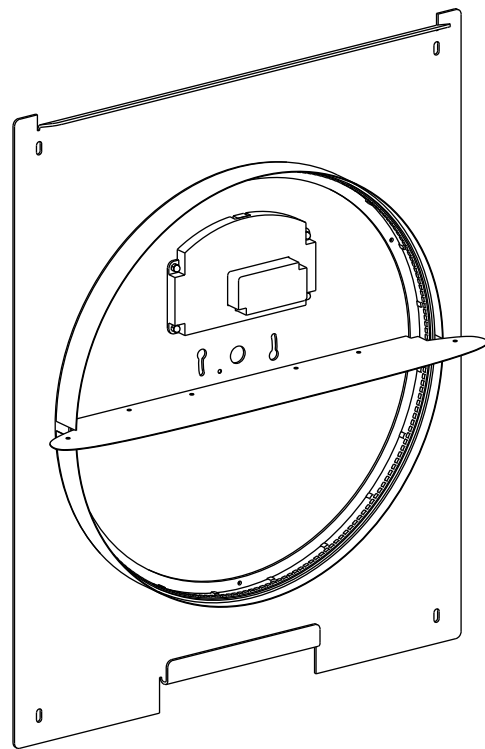

Base



Warning

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.



Advertencia

Apaga la alimentación principal en el disyuntor antes de instalar el accesorio para evitar posibles descargas eléctricas.



警告

在安装灯具之前，请关闭配电箱的主电源，以防止可能的触电。



[EN] This product must be installed following the applicable installation codes by a qualified individual who is knowledgeable about its construction, operation, and associated safety hazards.

[ES] Este producto debe instalarse de acuerdo con los códigos de instalación aplicables por una persona calificada que tenga conocimiento sobre su construcción, funcionamiento y los riesgos asociados.

[CN] 本产品必须由熟悉其结构、操作及相关安全隐患的合格人员，按照适用的安装规范进行安装。

01

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

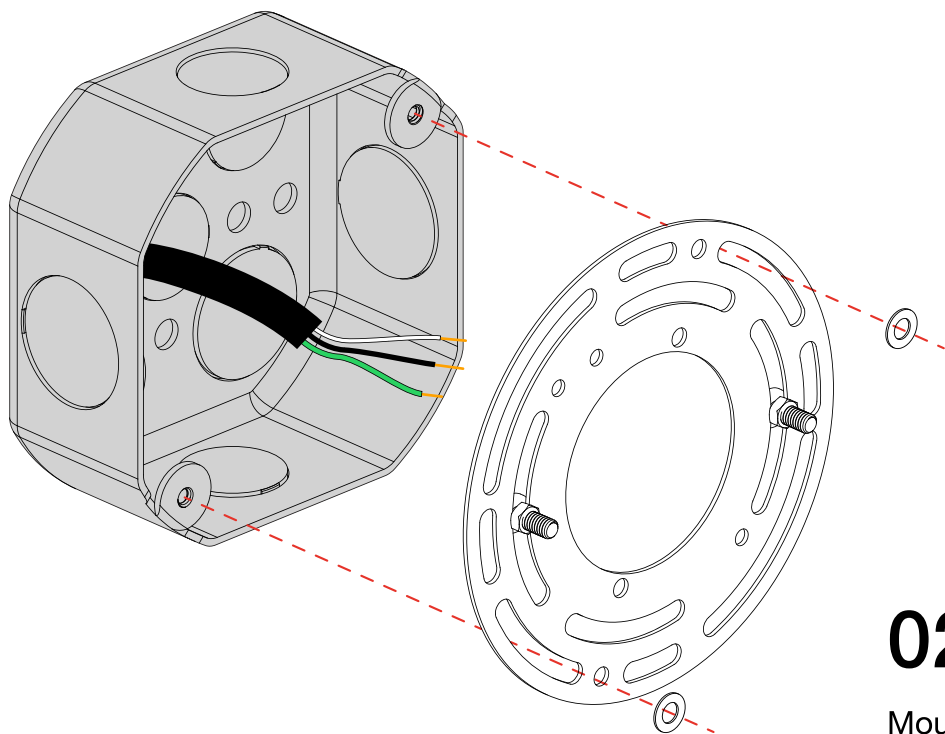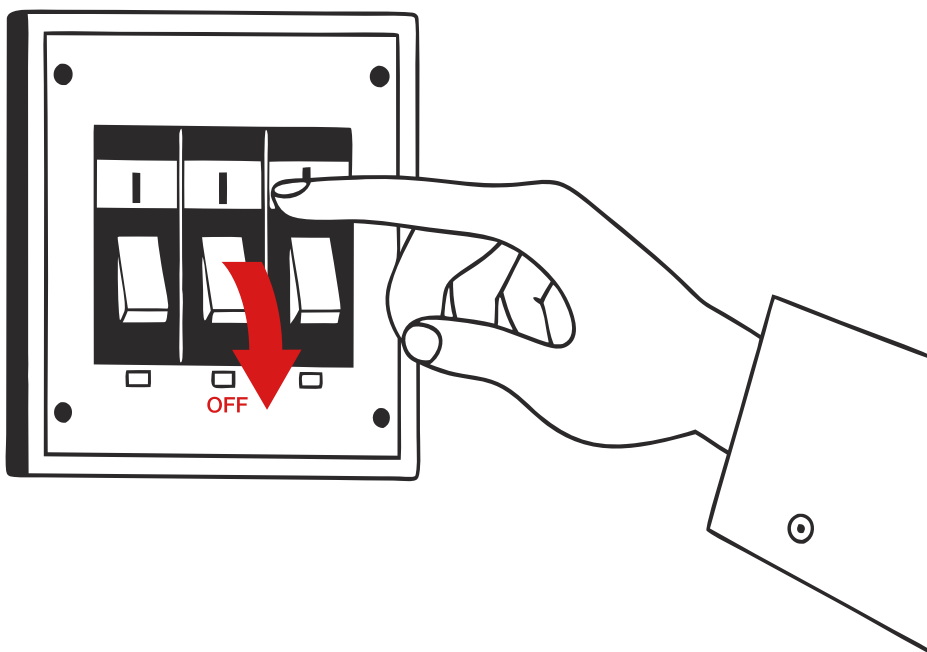


02

Mount the plate onto the junction box using two round-head screws.

03


Connect the ground wire from the building to the ground wire on the base using a 2-conductor Wago connector.

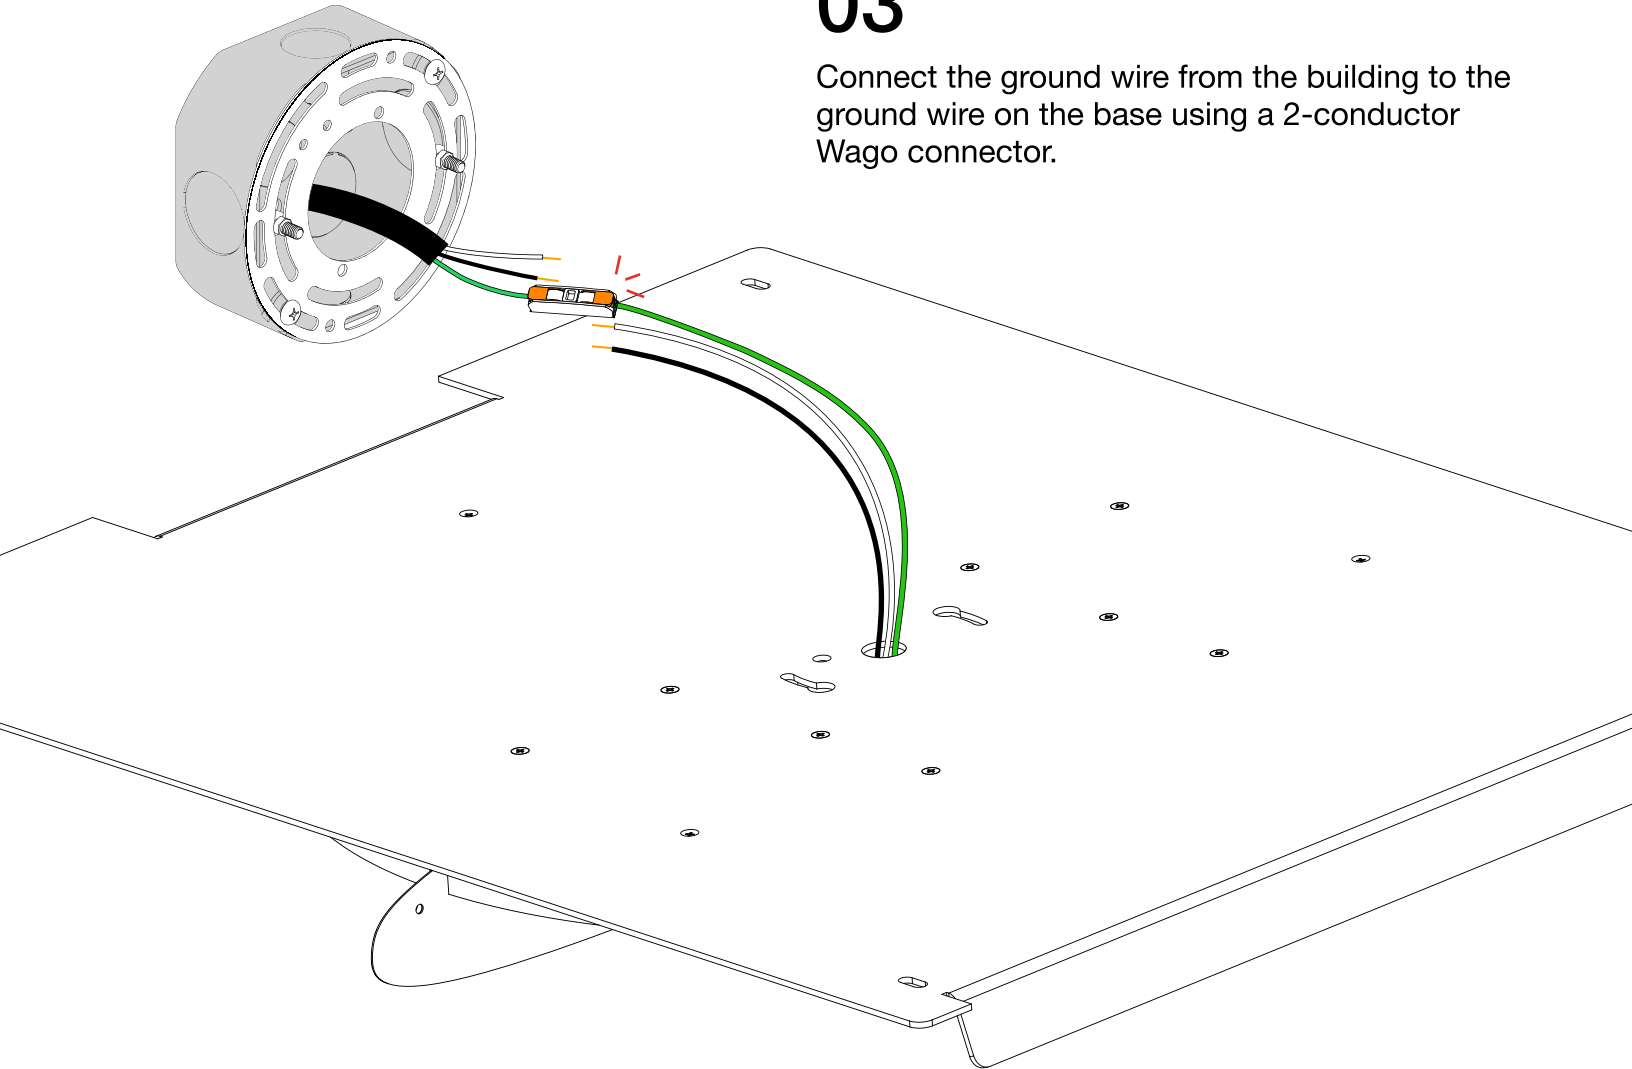

04


Black wire connects to the live wire (L), white wire connects to the neutral wire (N), and yellow-green wire connects to the protective earth wire.

- The live wire (L) is generally colored black, red, blue or yellow;
- The neutral wire (N) is generally colored white or grey;
- The earth wire (PE) is generally colored green-yellow strip, green, or exposed copper.

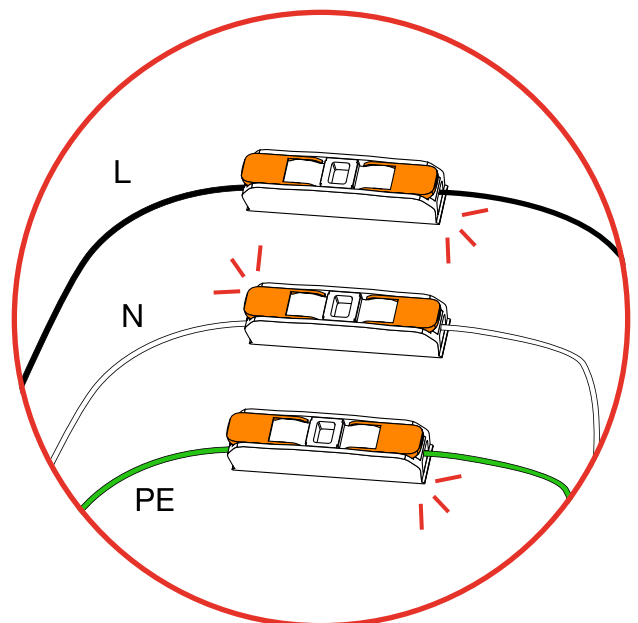

05

Push all the wires and connectors into the junction box.

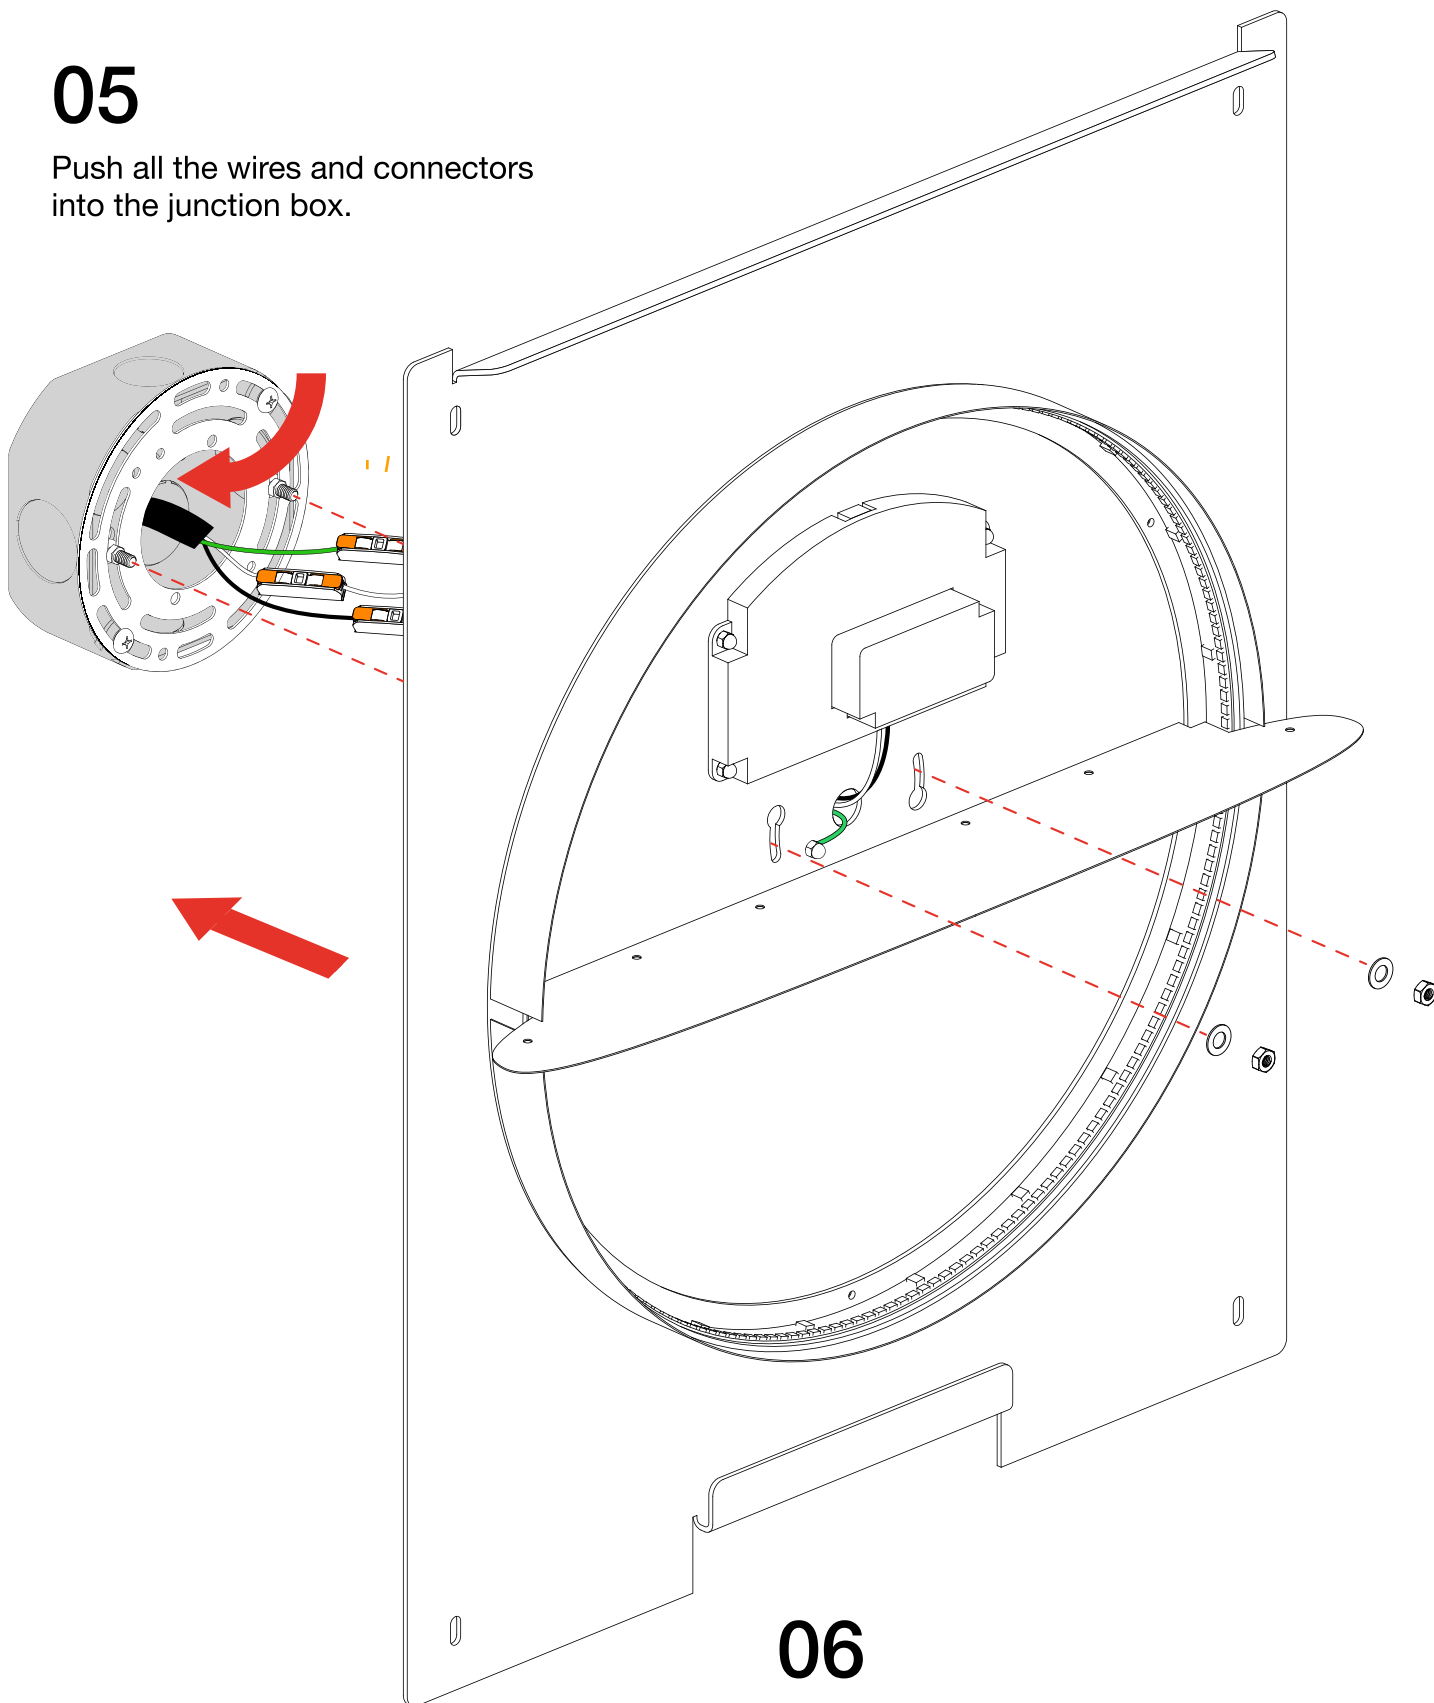



06


Attach the base to the mounting plate by aligning the holes at the center of the base with the pre-assembled screws on the mounting plate.

Place washers and **loosely tighten** the nuts onto the screws using the cross wrench.

07

Ensure the base is level, then fully tighten the nuts to secure the base in place.

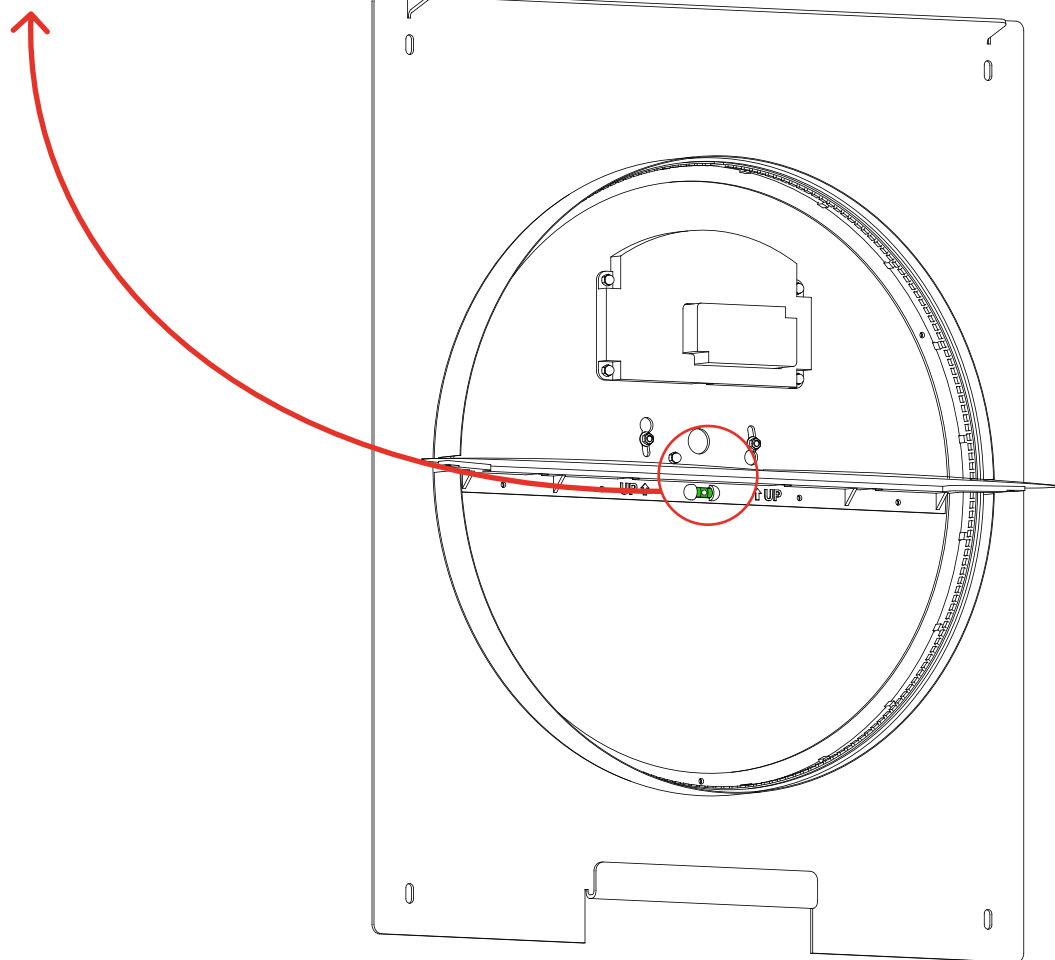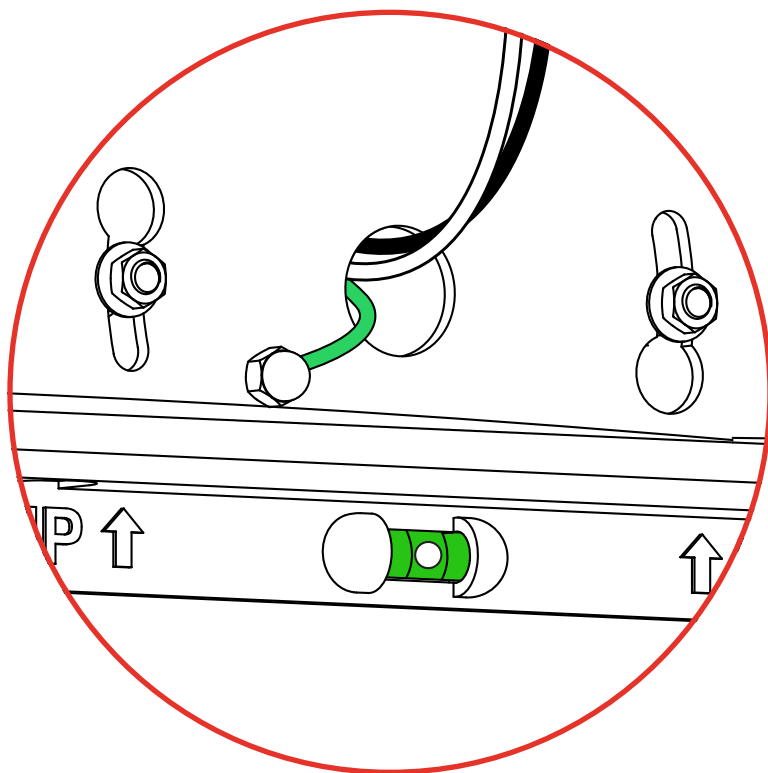

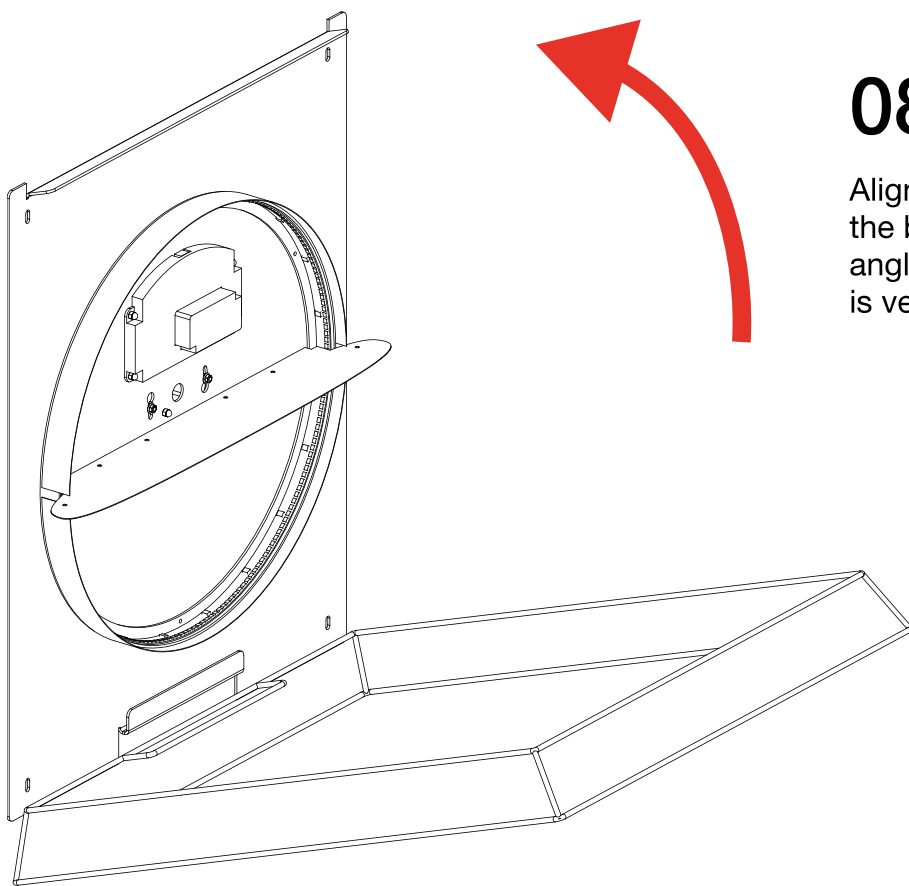


08


Align the bottom of the cover with the bottom of the base at an angle, then rotate the cover until it is vertical.

09

Gently lower the cover until it stops at the top. Ensure the cover is properly seated and cannot rotate outward.

*Note: If the raised line is not centered, gently wobble the cover to straighten the plastic sheet inside and reposition it correctly.

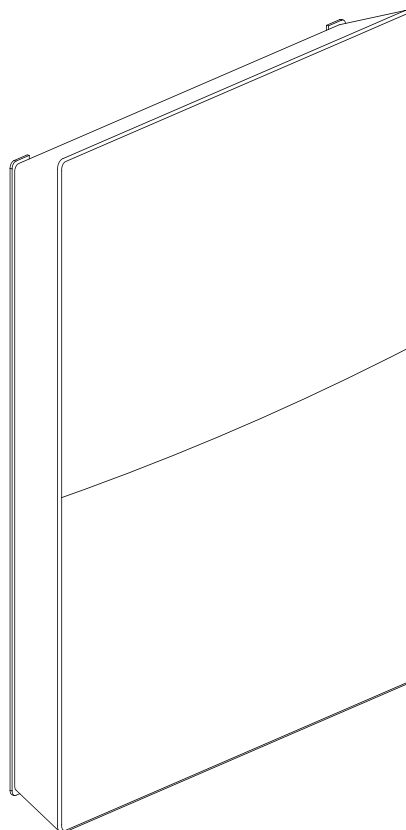

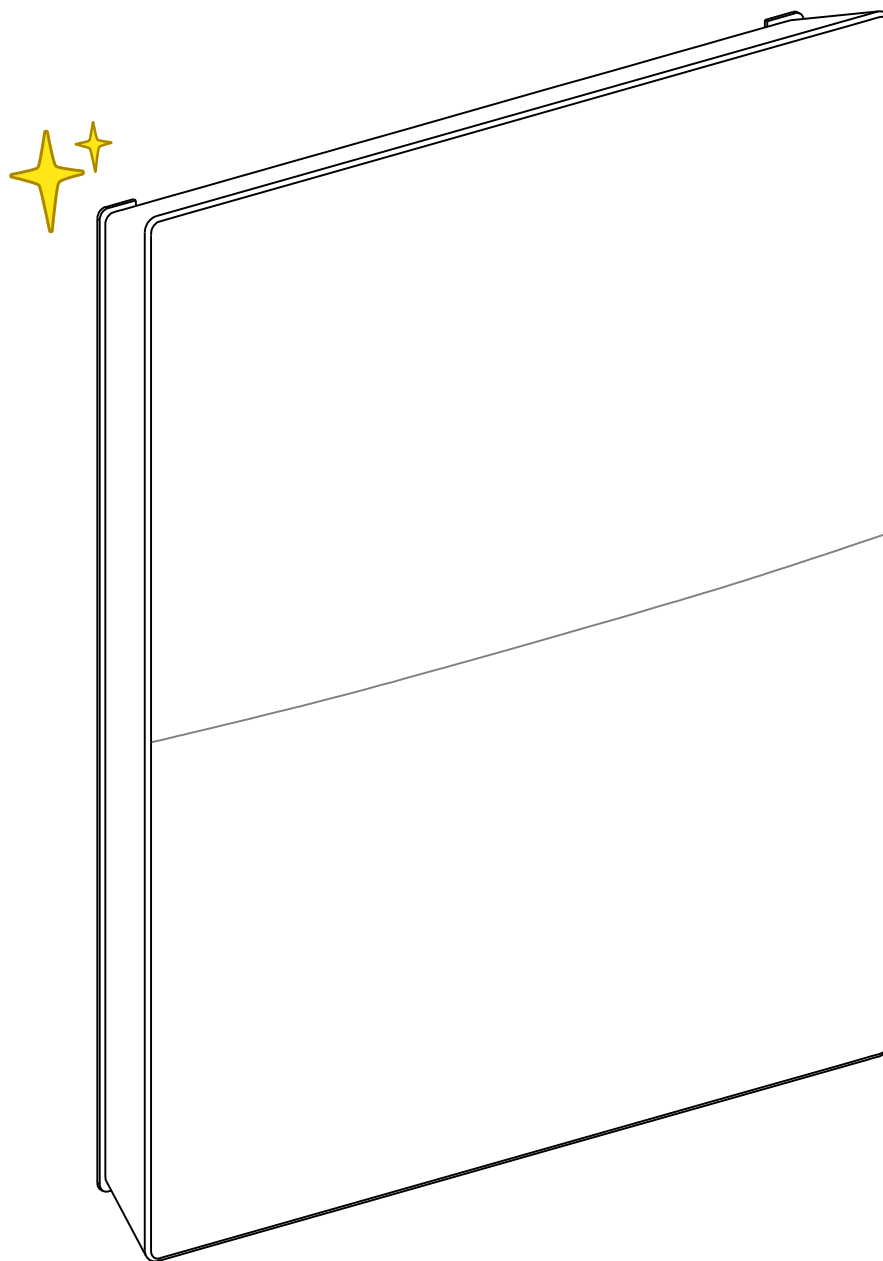

Congratulations, you've finished installation.
Now turn the power back on and enjoy your Canvas!

KĀDNS